

Injectronics

TECHNICAL BULLETIN

TOYOTA – RAV 4

#T0107

Make: Toyota

Model: Rav 4 2001

Subject: Engine won't start or vehicle runs erratically

TEST: Check ground wiring 1-8 volts at the ECM.

Disconnect the ignition coil/igniter connector terminal one at a time and check the engine operation.

Does the engine start easy yes /no, engine will run on 3 cylinders.

CAUSE: Ignition coil/igniter assembly creates a high ground voltage.

Replace the ignition coil.